Dual Function Bowl Light Kit

Owner's Guide and Installation Manual
Manual De Propietario

English

Español

SINCE 1886 Hunter®

Form# 43550-01
20100610
©2010 Hunter Fan Co.

Welcome

Your new Hunter® light kit is an addition to your home or office that will provide comfort and performance for many years. This installation and operation manual gives you complete instructions for installing and operating your light kit.

We are proud of our work. We appreciate the opportunity to supply you with the best products available anywhere in the world.

Before installing your light kit, for your records and warranty assistance, record information from the carton and Hunter nameplate label.

Cautions and Warnings

- **READ THIS ENTIRE MANUAL CAREFULLY BEFORE BEGINNING INSTALLATION. SAVE THESE INSTRUCTIONS.**
- Use only Hunter replacement parts.
- To reduce the risk of personal injury, install this light fixture only on Hunter® fan types A through Z. **Note:** The fan type can be found on the ceiling fan package or on the nameplate label located on top of the motor housing of the ceiling fan.
- To avoid possible electrical shock, before installing light fixtures, disconnect the power by turning off the circuit breakers both to the outlet box and to its associated wall switch location. If you cannot lock the circuit breakers in the off position, securely fasten a prominent warning device, such as a tag, to the service panel.
- Connect house wiring to the fan before attaching the light fixture to the fan.
- All wiring must be in accordance with national and local electrical codes and ANSI/NFPA 70. If you are unfamiliar with wiring, use a qualified electrician.

Table Of Contents

1 • Installing the Light Kit on a Ceiling . . 4

2 • Installing the Light Kit on a Removable Switch Housing 6

3 • Installing the Light Kit on a Non-Removable Switch Housing 8

4 • Installing the Light Kit on the Hunter Original 10

5 • Installing Bulbs, Chain, and Globe . . . 11

6 • Troubleshooting. 12

© 2010 Hunter Fan Company

Installation Methods of Hunter® Ceiling Fans Type A-Z

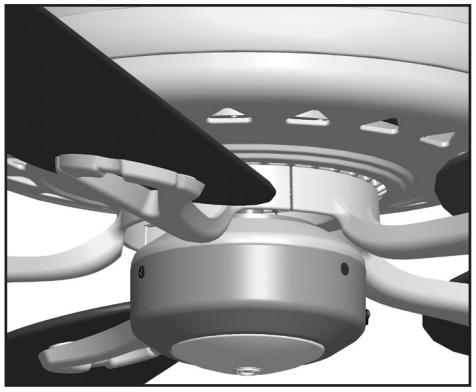

Removable Switch Housing

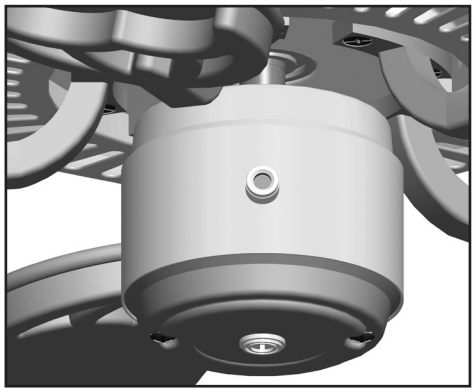

Non-removable Switch Housing

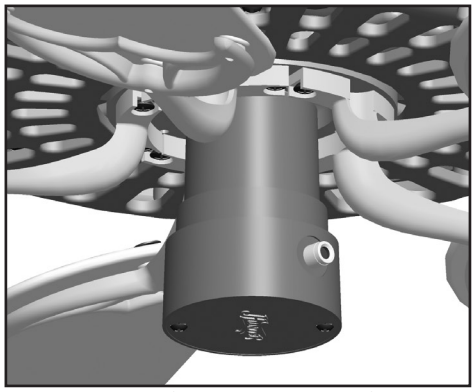

The Hunter Original

Your *Hunter*® light kit can be installed in one of four ways. The steps in this manual include instructions for all four installation methods: Installation directly on the ceiling, installation on fans with a removeable switch housing, fans with a non-removeable switch housing, and The Hunter Original.

Preparing the Light Kit:

1. Disconnect power by turning off the circuit breakers both to the outlet box and to its associated wall switch location.
2. The shade cover plate comes in a choice of decorative finishes. In addition, the cover plate for the ceiling-mounted light has no hole in the side; the cover plate for the fan-mounted light has a hole in the side. Choose the cover plate that applies to your decorating preference and your mounting preference.

Directly onto ceiling

1 • Installing the Light Kit on the Ceiling

1. If you are replacing an existing light fixture, disconnect and remove the old fixture and mounting bracket. Leave the wires coming from the outlet box exposed.
2. Pre-install the two #8-32 screws, two corresponding washers, and two #8-32 nuts on the hanger bracket. Tighten nuts securely. **Note:** The hanger bracket should be positioned so that the two #8-32 screws are coming down and the green grounding screw is going up towards the ceiling.
3. Using the screw holes located on the electrical box, secure the hanger bracket to the electrical box by threading the screws through the slotted holes in the hanger bracket. Tighten screws. **Note:** The screws for installing the hanger bracket to the electrical box should be installed in the opposite direction as the screws for installing the ceiling plate cover to the hanger bracket.
4. Locate the metal (uncoated) ground wire from the light fixture and the supply ground wire coming out of the electrical box. Connect the metal ground wire and the supply ground wire underneath the green ground screw on the hanger bracket. Tighten the green ground screw as needed.
5. Connect the white wire from the light fixture to the white supply wire coming out of the ceiling. Connect the black wire from the light fixture to the black supply wire coming out of the ceiling. Secure all wire connections using approved wire connectors. To connect the wires, hold the bare metal leads together and place a wire connector over them, then twist the wire connector clockwise until tight.
6. Spread the electrical splices so that the black wires are on one side of the outlet box and the white wires are on the other side.

⚠ **CAUTION**: Be sure no bare metal wires or wire strands are visible after making the connections.

7. Align the holes in the cover plate with the #8-32 screws that were pre-installed on the hanger bracket. Raise the light fixture and insert the screws through the two holes in the cover plate.
8. Install the decorative nuts on the end of each of the #8-32 screws. Tighten securely.

⚠ **WARNING**: Improper installation could cause the light fixture to fall, or result in electrical shock or personal injury.

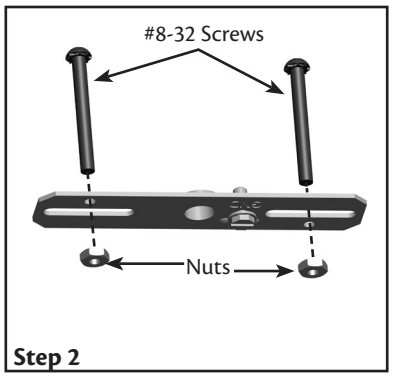

Step 2

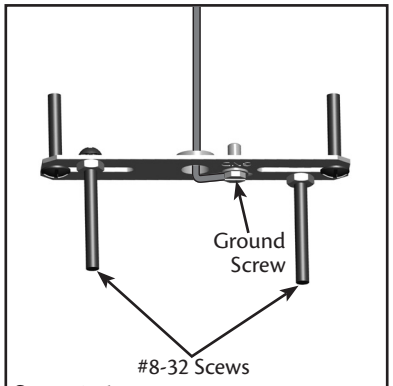

Steps 3-4

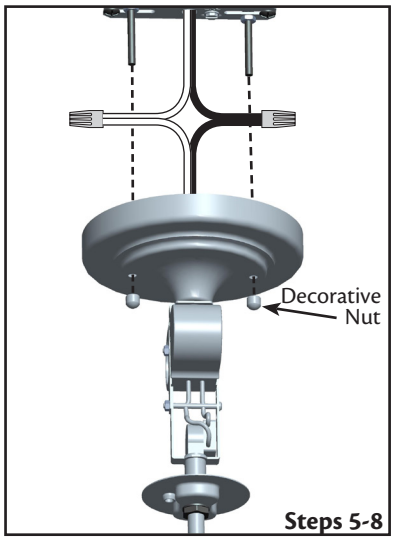

Steps 5-8

1 • Installing the Light Kit on the Ceiling (contintued)

9. Install the included CFL light bulbs into the lamp sockets.
10. Remove the lower chain extension from the light fixture by unhooking it from the breakaway connector. Leave the breakaway connector in place on the upper chain.
11. Thread the light pull chain through the hole in the center of the glass bowl. Place the glass bowl on the threaded rod until flush against the metal disc.
12. Place a cover plate (with no side hole) up against the glass bowl. Thread the light pull chain through the center opening of the cover plate.
13. Thread the light pull chain through the finial and screw the finial onto the threaded rod until tight.
14. The installation is complete and you can restore power to the light fixture.

Steps 11-14

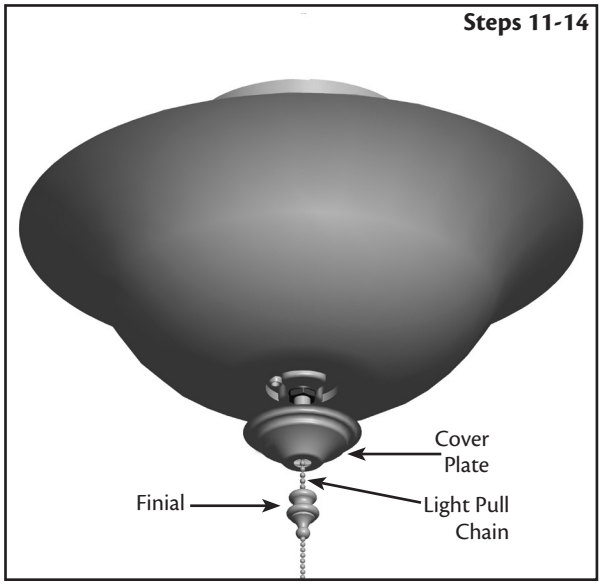

2 • Installing the Light Kit on a Removable Switch Housing

1. Unscrew the three screws from the upper switch housing. Disconnect the 9-pin plug connectors. Remove the lower switch housing.
2. Push the plug button from inside the lower switch housing to remove the plug button and switch housing cap.

   NOTE: Save the plug button and switch housing cap should you choose to remove the light fixture in the future.
3. Unscrew the nut and washer from the threaded rod at the top of the light kit to remove the mounting plate and replace it with the smaller switch housing cover included with the light fixture.
4. Feed the two wires from the light fixture through the center hole in the lower switch housing.
5. Screw the threaded rod of the light fixture into the center of the lower switch housing until you feel resistance. Unscrew the light fixture slightly until the holes of the light fixture are aligned with the holes in the lower switch housing.
6. Finish attaching the light fixture to the lower switch housing using the two attachment screws included. Securely tighten the two screws.
7. Install the nut and washer inside the upper switch housing onto the threaded rod from the upper light housing.

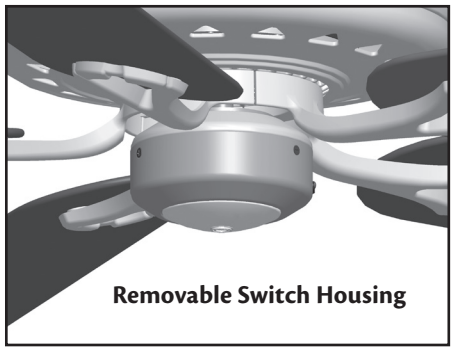

Removable Switch Housing

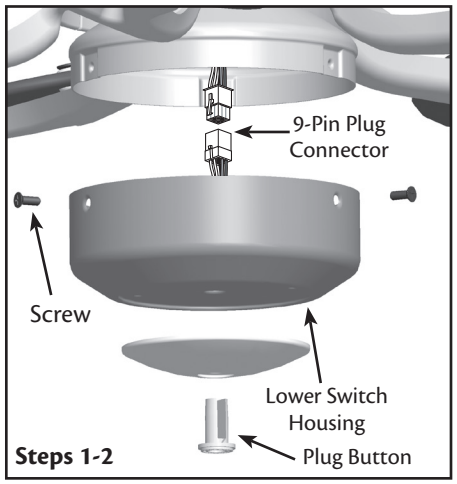

Steps 1-2

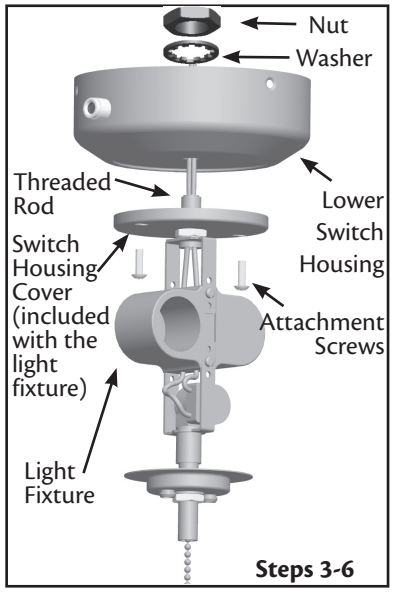

Steps 3-6

WARNING: Improper installation could cause the light fixture to fall.

2 • Installing the Light Kit on a Removable Switch Housing (Continued)

7. Remove the wire connectors from the two wires in the switch housing labeled "Connect Light Here" or "For Light Use."

   To connect the wires, hold the bare metal leads together and place a wire connector over them, then twist the wire connector clockwise until tight.

   Connect the black wire with a white stripe from the switch housing to the black wire from the light kit. Connect the white wire from the switch housing to the white wire from the light kit. Secure all wire connections using wire connectors.

   ⚠ **CAUTION**: Be sure no bare metal wires or wire strands are visible after making the connections.

8. Reconnect the 9-pin plug connector.
9. Reinstall screws to reattach the lower switch housing to the upper switch housing.
10. Go to the instructions for Installing the Bulbs, Chains, and Globe.

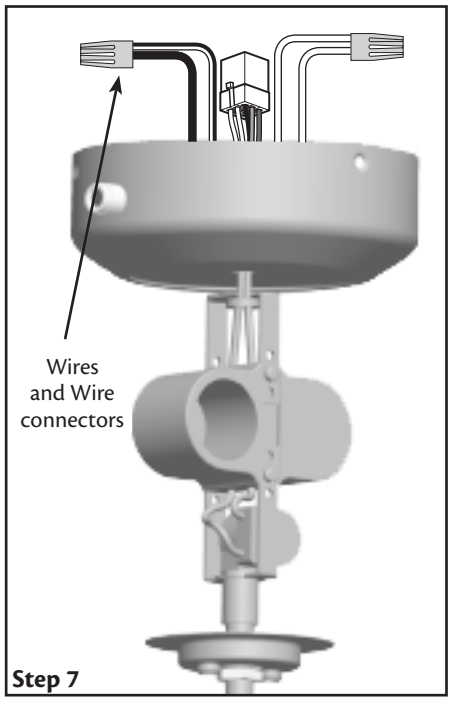

Step 7

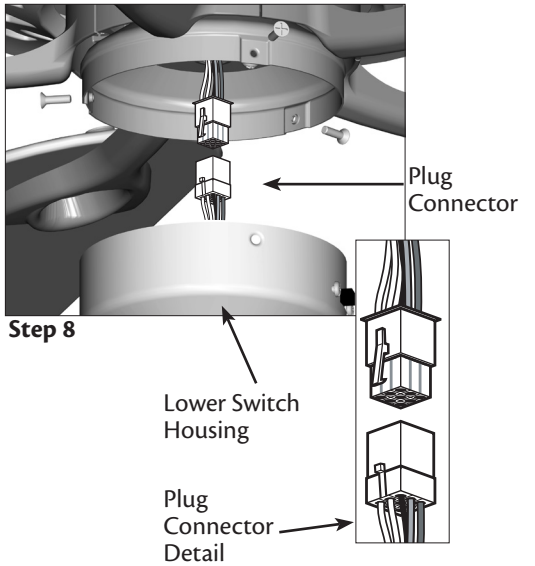

Step 8

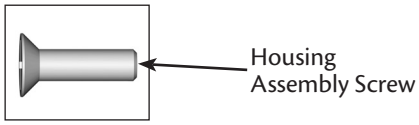

3 • Installing the Light Kit on Fans With Non-Removable Switch Housing

1. Uninstall the two attachment screws from the switch housing cover.
2. Remove the plug or screw from the center of the switch housing cover.
3. Thread the switch housing cover onto the upper light housing. Align the screw holes in the upper light housing with the screw holes in the switch housing cover. Install the nut and washer onto the threaded rod from the light kit to secure the switch housing cover.
4. Remove the wire connectors from the two wires in the switch housing labeled "Connect Light Here" or "For Light Use." One wire is white and the other wire is black with a white stripe.
5. Feed the two wires from the switch housing through the threaded rod in the upper light housing.
6. To connect the wires, hold the bare metal leads together and place a wire connector over them, then twist the wire connector clockwise until tight.

   Connect the black wire with a white stripe from the switch housing to the black wire from the light kit. Connect the white wire from the switch housing to the white wire from the light kit. Secure all wire connections using wire connectors.
7. Align the threaded screw holes in the switch housing cover with the threaded holes in the switch housing. Attach the switch housing cover and light fixture to the switch housing using the included attachment screws.

⚠ **CAUTION**: Be sure no bare metal wires or wire strands are visible after making the connections.

⚠ **WARNING:** Improper installation could cause the light fixture to fall.

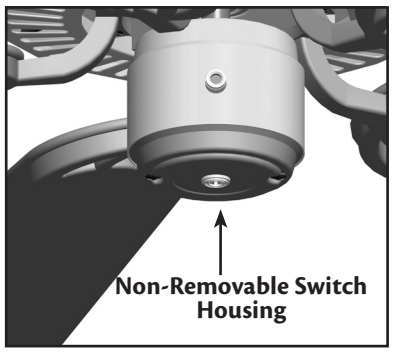

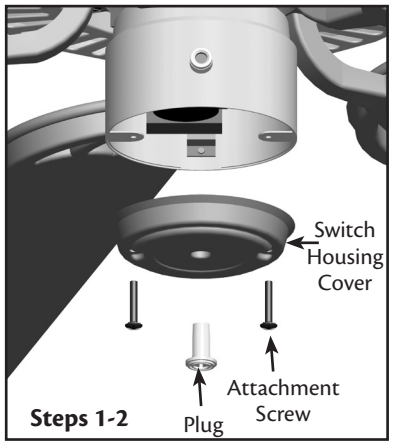

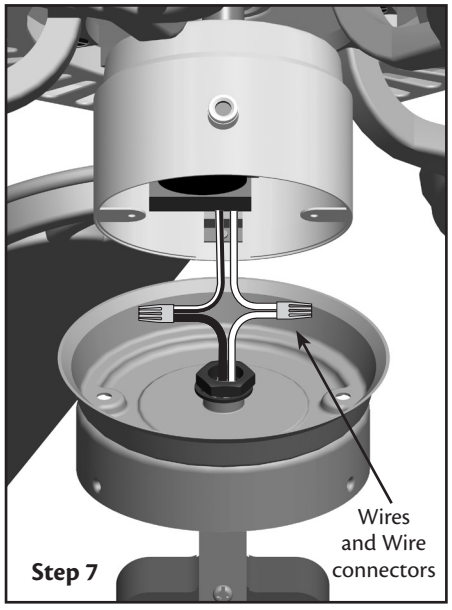

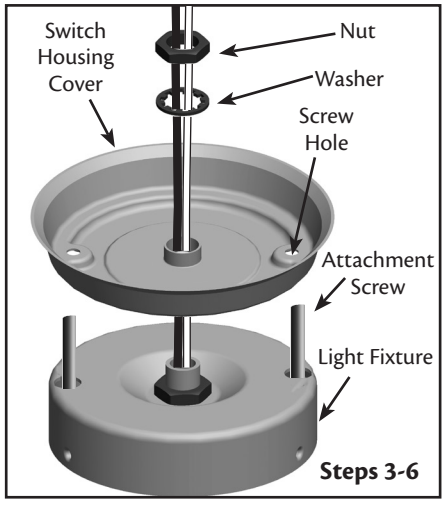

3 • Installing the Light Kit on a Non-Removable Switch Housing (cont.)

8. Attach the light fixture to the switch housing with the two screws included with the light fixture, aligning the holes in the light fixture, switch housing cover, and switch housing.
9. Securely tighten the two screws.
10. Go to the instructions for Installing the Bulbs, Chains, and Globe.

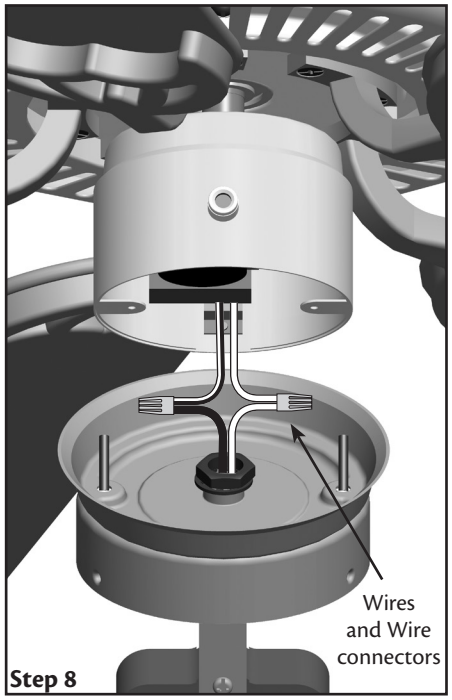

Step 8

4 • Installing the Light Kit on the Hunter Original

1. Uninstall the two screws from the switch housing plate.

   NOTE: Save the switch housing cap should you choose to remove the light fixture in the future.
2. Remove the wire connectors from the two wires in the switch housing labeled "Connect Light Here" or "For Light Use." One wire is white and the other wire is black wire with a white stripe. Thread the two wires through the hole in the center of the light fixture.
3. Unscrew the nut and washer from the threaded rod at the top of the light kit to remove the mounting plate and replace it with the smaller switch housing cover included with the light fixture.
4. To connect the wires, hold the bare metal leads together and place a wire connector over them, then twist the wire connector clockwise until tight.

   Connect the black wire with a white stripe from the switch housing to the black wire from the light kit. Connect the white wire from the switch housing to the white wire from the light kit. Secure all wire connections using wire connectors.

   ⚠ **CAUTION**: Be sure no bare metal wires or wire strands are visible after making the connections.
5. Attach the light fixture to the switch housing with the two screws, included with the light fixture, aligning the holes in the fixture, switch housing cover, and switch housing.
6. Securely tighten the two screws.
7. Go to the instructions for Installing the Bulbs, Chains, and Globe.

⚠ **WARNING**: Improper installation could cause the light fixture to fall, or result in electrical shock or personal injury.

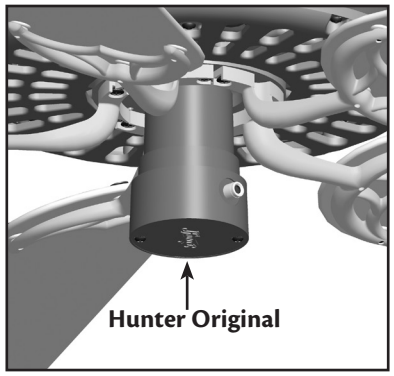

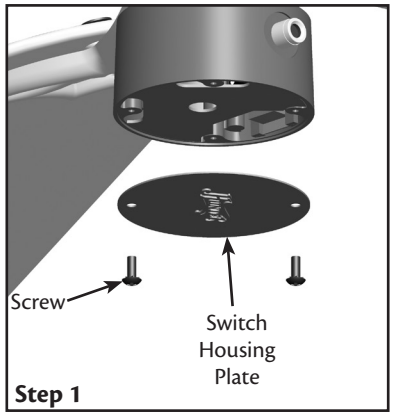

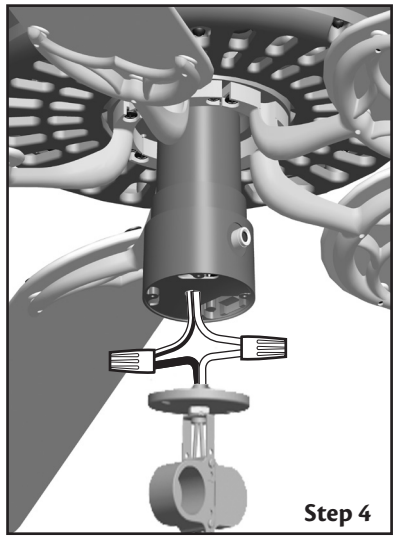

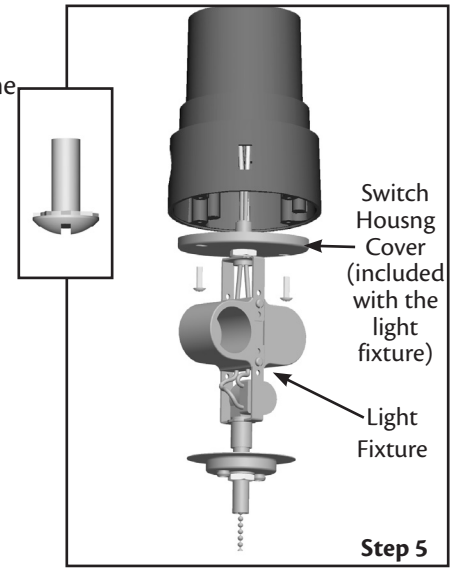

5 • Installing Bulbs, Chain, and Globe

1. First install included CFL medium base bulbs.
2. Thread the fan pull chain through the hole in the metal disc. Then, thread the fan pull chain through the hole in the center of the glass bowl.
3. Thread the light pull chain through the hole in the center of the glass bowl.
4. Place the cover plate up against the glass bowl. Align the holes in the cover plate and metal disc.
5. Thread the fan pull chain and light pull chain through the appropriate holes.
6. Thread the light pull chain through the finial and screw the finial onto the threaded rod end until tight.

CFL Bulb
(included)

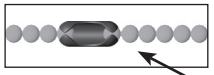

Breakaway
Connector

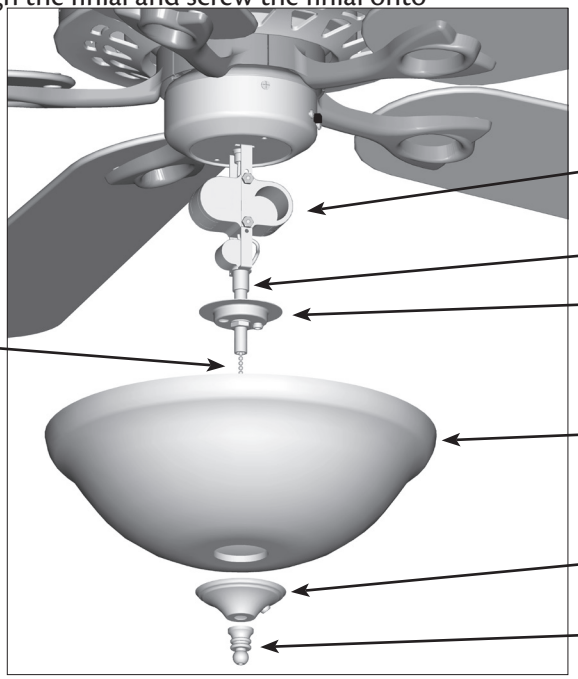

Troubleshooting

Light does not come on.

1. Make sure bulbs are installed properly.
2. Make sure breakers or fuses are on.
3. Verify that the light power lead is connected at the ceiling. Refer to your ceiling fan manual for locating assembly and wiring.

Glass rattles.

1. Make sure the glass globe is secure.

If you need parts or service assistance, please call 888-830-1326 or visit us at our Web site at http://www.hunterfan.com.

Hunter Fan Company
7130 Goodlett Farms Pkwy. # 400
Memphis, Tennessee 38016

This Light Fixture Weighs 6 lbs.

Printed in China